

PC Fan Controller

User manual



A. Feature:

- 1、 Two fan speed can be controlled manually at low noise
- 2、 The fan works normally, it shows Blue LED. If the wire doesn't connect with fan or abnormal, it shows RED LED. Under abnormal condition, it generates alarm "Beep sound".
- 3、 On the LCD can show two temperature values. If the temperature is over a certain amount of value, it will generate alarm "Beep" sound, the default setting is 50°C.

B. Installation guideline

- 1、 Remove the cover from desktop casing, also take out the bay mask, push the fan controller into the 3.5" bay and fix it by screws.
- 2、 The power source is using a standard D type of power plug.
- 3、 Connect each fans by fan power cords.
- 4、 Use attached sticker to stick on the heated area which desire to control. (Remark: The sensor can't be pressed by object,

can't be effected the heat transfer. The sensor can't be bended, folded and please don't put in moisture place.)

C. User Guideline

- 1、 Speed control: clockwise rotary to "HI" which means increase the fan speed
- 2、 Speed control: anticlockwise rotary to "LOW" which means decrease the fan speed

D. Parameters

| | |
|-----------------|------------------------------------------|
| Usage | 3.5" desktop bay |
| Size | 102*25*96 |
| Material | Aluminum alloy |
| Power Input | +5V 、 +12V (standard D type power plug) |
| Current | ≤0.3A |
| Fan Interface | 3P 2510 |
| No.fan control | 2 sets |
| No.Temp.control | 2 sets |

E. Packing and accessories

Fan Controller*1 Power cable*1 Fan Power Cord*2
Temperature Sensor*2 Screws*4 Sticker*2

www.knightdiscounts.com