

WT-PST POWER SUPPLY TESTER (Advance Version)

How to use the PST (for desktop computer power supply units only)?

1. Plug in the 20/24 pin power supply into the PST unit as shown above. This is the **MAIN POWER SUPPLY** to the PST; and should REMAIN connected at all times for the other power supply cables to be tested.

(Note: the main power supply is healthy if only all the LEDs show ALL **GREEN** "ON" Otherwise, it generates alarm which the power supply doesn't work properly).

(**WARNING**: DO NOT PLUG-IN all power supply cables at the same time, this will short-circuit this unit)



2. Next, provided that the Main Power Supply to the PST is healthy, now can proceed to do some health testing for the other power cables.

- 2a) Health Power Check on SATA Power Supply Cable. To connect the SATA power cable the **YELLOW** color should be facing toward left side of the PST box as shown below:



- 2b) Health Power Check on Floppy Power Supply Cable.



2c) Health Power Check on Motherboard Power Supply Cable:



2d) Health Power Check on Hard Drive/CDRom Drive Power Supply Cable:

